

2D Barcode Scanner Quick Start Guide

System Settings



Factory Defaults



Version

Communication Interface



USB Mode*



TTL/RS232 Mode

Baud Rate



9600*



115200

Reading Mode



Manual Mode*



Sense Mode

Suffix Settings



Allow Suffix*



Suffix Not Allowed



Add CR*



Add CR+LF

Sound Settings



Enable Sound*



Disable Sound

Data Format



GBK*



Unicode

Indication Light Settings



Enable*



Disable

Indication Light And Buzzer

1. Scan successfully:
Blue light flash once time.
2. Voice prompt:
The buzzer will beep once the code is successfully read.

Other Settings



Enable All Barcode



Enable All 1D Barcode



Enable All 2D Barcode