

2D Handheld Barcode Scanner



IG500 RF/BT

User Manual
V1.0

Table of Contents

1. Enter&Exit Setting	5
1.1 Enter setting mode	5
1.2 Exit setting mode	5
2. Version Display	5
3. Default Settings	5
3.1 Restore default settings	5
3.2 Set to default mode.....	5
4. Language Settings	5
4.1 International keyboard.....	5
4.2 General settings	5
5. Encoding Settings	9
5.1 Enter GBK code.....	9
5.2 Enter UTF encoding	9
5.3 Compulsory pairing with Dongle.....	9
6. Sound Related Settings (Wireless)	9
6.1 Mute.....	9
6.2 Low volume	9
6.3 Medium volume	10
6.4 High volume	10
7. Buzzer Setting (Wireless).....	10
7.1 Buzzer frequency 2K.....	10
7.2 Buzzer frequency 2.7K.....	10
8. Transmission Mode	10
8.1 Enter normal mode	10
8.2 Enter inventory mode	10
8.3 Data upload.....	10
8.4 Display total storage entries.....	11
8.5 Clear inventory data.....	11
9. Sleep Time Setting.....	11
10. Display Battery	12
11. Sound Settings.....	12
11.1 Scanning head sound (Decoder)	12
11.2 MCU sound (Wireless).....	12
12. Vibration Setting (customized).....	12
12.1 Turn on	12
12.2 Turn off.....	12
13. Transfer Settings.....	13
13.1 Fast	13
13.2 Medium	13
13.3 Low	13
13.4 Ultra-low	13

14. Communication Mode Settings.....	13
14.1 2.4G mode HID mode.....	13
14.2 Virtual Bluetooth mode.....	13
14.3 Bluetooth HID mode	13
14.4 Bluetooth SPP mode	13
14.5 Bluetooth BLE mode.....	14
14.6 Android input mode	14
14.7 2.4G Virtual serial port mode.....	14
15. Bluetooth Name Setting.....	14
16. HID Setting	15
16.1 Allow long press button to enter HID search	15
16.2 Prohibit long press button to enter HID search	15
16.3 HID Keyboard pop up/hide.....	15
16.4 Disable double-click to pop up/hide HID keyboard.....	15
16.5 Enable double click to pop up/hide HID keyboard.....	15
17. GS Conversion Character Settings	15
17.1 Set GS conversion character.....	15
17.2 Turn off GS character conversion	15
18. Output Setting.....	16
18.1 Add a carriage return at the end.....	16
18.2 Add a newline at the end	16
18.3 Add carriage return and line feed at the end.....	16
18.4 Add Tab at the end	16
18.5 Disable add at the end	16
19. Conversion to Uppercase or Lowercase	16
19.1 Cast to lowercase	16
19.2 Cast to uppercase.....	16
19.3 Convert between uppercase and lowercase	16
19.4 Disable convert case.....	16

1. Enter&Exit Setting

1.1 Enter setting mode



1.2 Exit setting mode



2. Version Display

Display version information



3. Default Settings

3.1 Restore default settings



3.2 Set to default mode



4. Language Settings

4.1 International keyboard



4.2 General settings

American English (Chinese)



German



French



Spanish



Italian



Japanese



Belgian French



Portuguese



British English



German IOS keyboard: Apple system German keyboard



Brazilian Portuguese



Russian



Czech



Italian 142



Turkey Q



Turkey F



Sweden/Finland



Mexican Spanish



Danish



Norwegian



Croatian



Swiss German



Swiss-French



Dutch



Hungarian



Polish



Canadian French



Argentina (Latin American)



Slovak



5. Encoding Settings

5.1 Enter GBK code



5.2 Enter UTF encoding



5.3 Compulsory pairing with Dongle



6. Sound Related Settings (Wireless)

6.1 Mute



6.2 Low volume



6.3 Medium volume



6.4 High volume



7. Buzzer Setting (Wireless)

7.1 Buzzer frequency 2K



7.2 Buzzer frequency 2.7K



8. Transmission Mode

8.1 Enter normal mode



8.2 Enter inventory mode



8.3 Data upload



8.4 Display total storage entries



8.5 Clear inventory data



9. Sleep Time Setting

30 seconds



1 minute



2 minutes



5 minutes



10 minutes



30 minutes



Never



Sleep now



10. Display Battery

Display battery percentage



11. Sound Settings

11.1 Scanning head sound (Decoder)



Note: Wireless sound OFF

11.2 MCU sound (Wireless)



12. Vibration Setting (customized)

12.1 Turn on



12.2 Turn off



13. Transfer Settings

13.1 Fast



13.2 Medium



13.3 Low



13.4 Ultra-low



14. Communication Mode Settings

14.1 2.4G mode HID mode



14.2 Virtual Bluetooth mode



14.3 Bluetooth HID mode



14.4 Bluetooth SPP mode



14.5 Bluetooth BLE mode



14.6 Android input mode



14.7 2.4G Virtual serial port mode



15. Bluetooth Name Setting

Set Bluetooth name



Read Bluetooth name



The method of setting the Bluetooth name:

Scan the Bluetooth name barcode first, and then scan a barcode, this barcode will be set as the Bluetooth name.

※Note

- a) The name can only be set up to 16 bytes. If the name bar code exceeds 16 bytes, the scanner will only take the first 16 bytes as the Bluetooth name.
- b) The complete Bluetooth name includes Bluetooth name + protocol type, which only supports modifying the Bluetooth name. After modifying the Bluetooth name, the names of all Bluetooth protocols have been changed. For example: if the Bluetooth name is set as Scanner, the name of Bluetooth HID is Scanner HID, the name of SPP is: Scanner SPP, and the name of BLE is Scanner BLE.

16. HID Setting

16.1 Allow long press button to enter HID search



16.2 Prohibit long press button to enter HID search



16.3 HID Keyboard pop up/hide



16.4 Disable double-click to pop up/hide HID keyboard



16.5 Enable double click to pop up/hide HID keyboard



17. GS Conversion Character Settings

17.1 Set GS conversion character



17.2 Turn off GS character conversion



18. Output Setting

18.1 Add a carriage return at the end



18.2 Add a newline at the end



18.3 Add carriage return and line feed at the end



18.4 Add Tab at the end



18.5 Disable add at the end



19. Conversion to Uppercase or Lowercase

19.1 Cast to lowercase



19.2 Cast to uppercase



19.3 Convert between uppercase and lowercase



19.4 Disable convert case

