

Easy & Powerful

## **2D PROGRAMMING**

---

### **QUICK GUIDE**

*v1.0*

Version Information



Set All Default



## Interface Selection

USB



VCOM



RS232



## Quick Setting of Barcode Selection

Enable All Barcodes



Enable All 1D Barcodes



Enable All 2D Barcodes



# Reading Mode Selection

## Trigger mode

Good Read OFF



Trigger ON/OFF



## Auto Sense mode

Auto Sense

illumination is on for a while after decode;  
Aimer always on



## Select Terminator

<CR+LF>



CR



HT (TAB)



None



## Vibration Setting

ON



<OFF>



## Buzzer Setting

<ON>



OFF



## Setup Baud Rate

<9600>



19200



115200



## Symbology Selection

<UPC-A ON>



UPC-A OFF



<UPC-E ON>



UPC-E OFF



**<EAN-13/JAN-13/  
ISBN-13 ON>**



**EAN-13/JAN-13/  
ISBN-13 OFF**



**<EAN-8/JAN-8 ON>**



**EAN-8/JAN-8 OFF**



**<CODE 39 ON>**



**CODE 39 OFF**



**<CODE 128 ON>**



**CODE 128 OFF**



**<CODABAR/NW7 ON>**



**CODABAR/NW7 OFF**



**<Interleaved 25 ON>**



**Interleaved 25 OFF**



**GS1 Data Bar-**

**Omni directional ON**



**<GS1 Data Bar-**

**Omni directional OFF>**



**GS1 Data Bar-**

**Limited ON**



**<GS1 Data Bar-**

**Limited OFF>**



GS1 Data Bar-  
Expanded ON



<GS1 Data Bar-  
Expanded OFF>



<QR Code ON>



QR Code OFF



<PDF417 ON>



PDF417 OFF



<Data Matrix ON>



Data Matrix OFF

