

Easy & Powerful

2D PROGRAMMING

QUICK GUIDE

Version Information



Set All Default



Interface Selection

USB



VCOM



RS232



Quick Setting of Barcode Selection

Enable All Barcodes



Enable All 1D Barcodes



Enable All 2D Barcodes



Reading Mode Selection

Trigger mode

Applicable model:

Handheld IG500

Good Read OFF



Trigger ON/OFF



Auto Sense mode

Applicable model:

Handheld IG500

Auto Sense

illumination is on for a while after decode;
Aimer always on



Select Terminator

<CR+LF>



CR



HT (TAB)



None



Vibration Setting

ON



<OFF>



Buzzer Setting

<ON>



OFF



Setup Baud Rate

<9600>



19200



115200



Symbology Selection

<UPC-A ON>



UPC-A OFF



<UPC-E ON>



UPC-E OFF



**<EAN-13/JAN-13/
ISBN-13 ON>**



**EAN-13/JAN-13/
ISBN-13 OFF**



<EAN-8/JAN-8 ON>



EAN-8/JAN-8 OFF



<CODE 39 ON>



CODE 39 OFF



<CODE 128 ON>



CODE 128 OFF



<CODABAR/NW7 ON>



CODABAR/NW7 OFF



<Interleaved 25 ON>



Interleaved 25 OFF



GS1 Data Bar-

Omni directional ON



<GS1 Data Bar-

Omni directional OFF>



GS1 Data Bar-

Limited ON



<GS1 Data Bar-

Limited OFF>



GS1 Data Bar-
Expanded ON



<GS1 Data Bar-
Expanded OFF>



<QR Code ON>



QR Code OFF



<PDF417 ON>



PDF417 OFF



<Data Matrix ON>



Data Matrix OFF

